

TT 251

OPERATING INSTRUCTIONS

Translation of the original instructions



NORTON
SAINT-GOBAIN®

clipper®



The undersigned manufacturer:

SAINT - GOBAIN ABRASIVES S.A.
190, BD J.F. KENNEDY
L- 4930 BASCHARAGE

Declares that this product:

Tile saw (Code)

TT251230V

70184602662

TT 251 230 V UK

70184602667

TT 251 115V

70184602663

is in conformity with the following Directives:

- "MACHINES" 2006/42/CE
- "LOW VOLTAGE" 2014/35/UE
- "ÉLECTROMAGNÉTIQUE COMPATIBILITY" 2014/35/CE
- "NOISE" 2000/14/CE

and European standard :

- **EN 12418 – Masonry and stone cutting-off machines – Safety**
- **EN ISO 13857 – Safety of machines – Safety Distance**
- **EN 60204-1 – Safety of machines – Electrical equipment**
- **EN 61000-3-2 –electromagnetic compatibility**
- **EN 61000-3-3 – electromagnetic compatibility**
- **EN 55014 – electromagnetic compatibility**

Valid for machines as of serial number: **1701XXXXX**

Storage site for the technical documents : Saint-Gobain Abrasives 190, Bd. J. F. Kennedy
4930 BASCHARAGE, LUXEMBOURG

This declaration of conformity loses its validity when the product is converted or modified
without agreement.

Bascharage, Luxembourg, 04.12.2017.

Olivier Plenert, executive officer.

TT 251 : OPERATING INSTRUCTIONS

TABLE OF CONTENTS



1. <u>Basic Safety Instructions</u>	6
1.1 <i>Symbols</i>	6
1.2 <i>Machine plate</i>	7
1.3 <i>Safety instructions for particular operating phases</i>	7
2. <u>Machine description</u>	8
2.1 <i>Short description</i>	8
2.2 <i>Purpose of use</i>	8
2.3 <i>Layout</i>	9
2.4 <i>Technical Data</i>	10
2.5 <i>Statement regarding the vibration emission</i>	11
2.6 <i>Statement regarding noise emission</i>	12
3. <u>Assembly and commissioning</u>	13
3.1 <i>Tool assembly</i>	13
3.2 <i>Guide-a-cut assembly</i>	13
3.3 <i>Electrical connections</i>	13
3.4 <i>Starting the machine</i>	14
3.5 <i>Water cooling system</i>	14
4. <u>Transport and storing</u>	14
4.1 <i>Securing for transport</i>	14
4.2 <i>Long period of inactivity</i>	14
5. <u>Operating the machine</u>	15
5.1 <i>Site of work</i>	15
5.2 <i>Cutting methods</i>	15
5.3 <i>Bevel cut</i>	15
5.4 <i>General advice for the cutting</i>	15
6. <u>Maintenance and servicing</u>	16
7. <u>Faults: causes and cures</u>	17
7.1 <i>Fault-finding procedures</i>	17
7.2 <i>Trouble-shooting guide</i>	17
7.3 <i>Circuit diagram</i>	18
7.4 <i>Customer service</i>	19

1. Basic Safety Instructions

The TT251 is exclusively designed for the cutting of tiles mainly on construction sites. Uses other than the manufacturer's instructions shall be considered as contravening the regulations. The manufacturer shall not be held responsible for any resulting damage. Any risk shall be borne entirely by the user. Observing the operating instructions and compliance with inspection and servicing requirements shall also be considered as included under use in accordance with the regulations.


1.1 Symbols

Important warnings and pieces of advice are indicated on the machine using symbols. The following symbols are used on the machine:

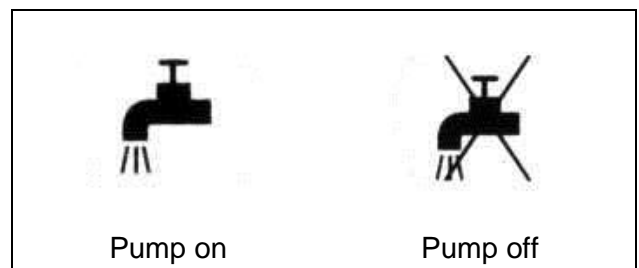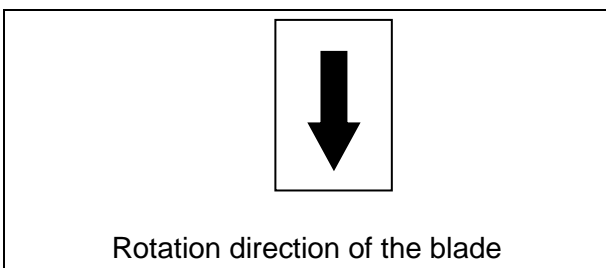

1.2 Machine plate

Important data can be found on the following plate located on the machine:

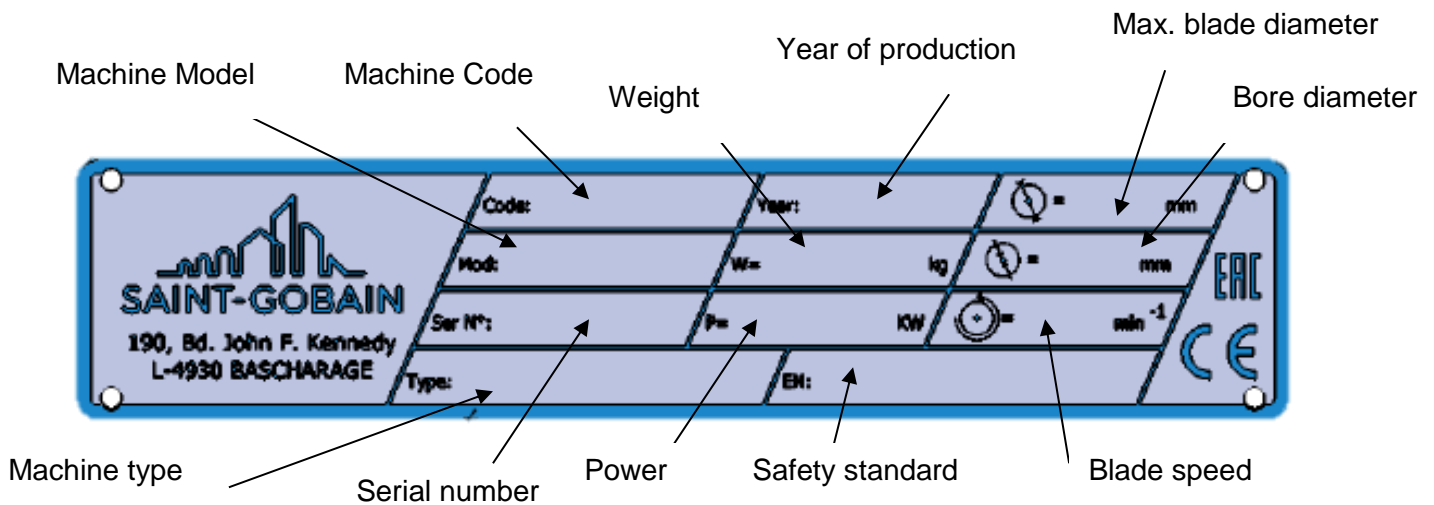

1.3 Safety instructions for particular operating phases

Before commencing work

- Before commencing work, make yourself familiar with the working environment at the place of use. The working environment includes: obstacles in the area of work and manoeuvre, the firmness of the floor, necessary protection at the site relating to public thoroughfares and the availability of help in the event of accidents.
- Site the machine on an even, firm and stable base!
- Check for correct mounting of the blade regularly.
- Immediately remove damaged or badly worn blades, as they endanger the operator whilst rotating.
- The material to be cut must be held securely in place on the table to allow no unexpected movement during cutting operation.
- Always cut with the blade guard in position.
- Only fit NORTON CLIPPER diamond blades with continuous rim to the machine! The use of other tools can damage the machine!
- Read the blades' specifications carefully to choose the correct tool for your application.
- Attention is drawn to the use of BS2092 safety goggles in conformity with specified Processes No.8 of the Protection of Eyes Regulation 1974.

Electrical powered machine

- Always turn off the machine and separate it from the main source of electricity before any work on the machine is done.
- Make all electrical connections securely to eliminate contact of live wires with spray water or dampness
- When the machine is used with water, it is IMPERATIVE that you earth the machine properly. Let a qualified electrician check in case of doubt.
- In case of emergency, you can stop the machine by pushing on the front cover of the switch.
- In the event of the machine breaking down or stopping for no apparent reason, switch off the main electricity supply. Only a qualified electrician is allowed to investigate the trouble and remedy the fault.

2. Machine description

Any modification, which could lead to a change in the original characteristics of the machine, may be done only by Saint-Gobain Abrasives who shall confirm that the machine is still in conformity with the safety regulations.

2.1 Short description

The TT251 Tile saw is designed for durability and high performance for onsite wet and dry cutting operations of a wide range of tiles.

As with all other CLIPPER products, the operator will immediately appreciate the attention given to detail and quality of materials used in construction. The machine and its component parts are assembled to high standards assuring long life and minimum maintenance.

2.2 Purpose of use

The machine is designed for wet and dry cutting of a large range of tiles. It is not designed for cutting wood or metals.

2.3 Layout



Frame (1)

The frame is made of a jig-welded reinforced steel construction to ensure perfect rigidity. It supports the motor, the cutting table and the switch.

Cutting table (2)

Stainless steel top for an excellent resistance to corrosion with engraved measurements for precise guide-a-cut alignment.

Electrical Motor and switch (3)

1kW motor. The ON-OFF switch also serves as emergency stop.

Blade guard (4)

Jig-welded steel construction with 250mm-diameter blade capacity, which offers maximum operator protection and increased visibility of the work piece. The guard is assembled on the frame.

Guide-a-cut (5)

The guide-a-cut can be adjusted to the desired cutting width. It is locked using two screws.

Water tank (6)

The blade is cooled by turning inside the water tank (7) located under the working table. The water also minimises the dust generation and improves quality of cut. It can be taken out of the machine by unscrewing the two nuts (7). An opening (8) in the frame allows the tank to be refilled easily.

Bevel cut

You can make bevel cuts with the machine by loosening the two screws (9) and pivoting the table.

2.4 Technical Data

Electric motor	1000W
Voltage	220V 110V
Protection rating	IP 54
Max. blade diameter	250 mm
Bore	25,4 mm
Rotation speed of the blade	2990 Tr. min ⁻¹
Flange diameter	70 mm
Cutting depth mm	55 mm
Sound pressure level	71 dB (A) (ISO EN 11201)
Sound energy level	79 dB (A) (ISO EN 3744)
Table dimension (LxW)	560x500 mm
Machine dimensions (LxWxH)	600x550x390 mm
Weights	
Machine cpl.	26 kg
Ready for use (with water)	28 kg

2.5 Statement regarding the vibration emission

Declared value of vibration emission following **EN 12096**.

Machine Model / code	Measured value of vibration emission at m/s ²	Uncertainty K m/s ²	Tool used Model / code
TT 251	<2.5	0.5	Clipper Classic Ceram

- The vibration value is lower and does not exceed 2.5 m/s².
- Values determined using the procedure described in the standard **EN 12418**.
- The measurements are made with new machines. Actual values may vary with site conditions, in terms of:
 - Materials worked
 - Wear Machine
 - Lack of maintenance
 - Inappropriate tool for application
 - Tool in poor condition
 - Unskilled operator
 - Etc...
- The exposure time to vibration is based on the performance of work (related to the adequacy Machine / Tool / worked material / operator)
- When evaluating risks due to hand-arm vibration, you need to take into account effective usage at rated power of machine during a full day of work; quite often you will realise that effective utilisation time represents around 50% of overall duration of work. You have to consider, of course, breaks, water feeding, preparation of work, time to move the machine, disk mounting...

2.6 Statement regarding noise emission

Declared value of noise emission following **EN ISO 11201** and **NF EN ISO 3744**.

Machine Model / code	Sound Pressure level L_{Peq} EN ISO 11201	Uncertainty K (Sound Pressure level L_{Peq} EN ISO 11201)	Sound power level L_{Weq} NF EN ISO 3744	Uncertainty K (Sound power level L_{Weq} NF EN ISO 3744)
TT 251	71 dB(A)	2.5 dB(A)	79 dB(A)	4 dB(A)

- Values determined using the procedure described in the standard **EN 12418**.
- The measurements are made with new machines. Actual values may vary with site conditions, in terms of:
 - Wear Machine
 - Lack of maintenance
 - Inappropriate tool for application
 - Tool in poor condition
 - Unskilled operator
 - Etc...
- Measured values relate to an operator in normal use, as described in the manual position.

3. Assembly and commissioning

The machine is delivered fully equipped. It is ready for operation. Before using the machine for the first time, please read the following instructions.

3.1 Tool assembly

Only NORTON CLIPPER continuous rim blades with a maximum diameter of 250 mm can be used with the TT251.

All tools used must be selected with regard to their maximum permitted cutting speed for the machine's maximum permitted rotation speed.

Before mounting a new blade into the machine, switch off the machine and isolate it from the main source of electricity.



To mount a new blade, follow these steps:

- Loosen the two screws (1) on the side of the machine and remove the water tank.
- Loosen the hexagonal nut (3) on the blade shaft with the 19mm wrench (Caution: left threaded), which holds the removable outer flange.
- Remove the outer flange.
- Clean the flanges and blade shaft and inspect for wear.
- Mount the blade on shaft ensuring that direction of rotation is correct (check with the arrow on the blade guard). Wrong direction of rotation blunts the blade quickly.
- Replace outer blade flange.
- Tighten hexagonal nut.
- Reassemble the water tank in the frame, and retighten the two screws (1).

The blade bore must correspond exactly to the diameter of the blade shaft. Cracked or damaged bore is dangerous for the operator and for the machine.

3.2 Guide-a-cut assembly

- Put the guide-a-cut on the table.
- Screw the two locking screws.

3.3 Electrical connections

Check that,

- the voltage/phase supply corresponds to the information indicated on the motor plate.
- Available power supply must have ground connection in conformity with safety regulations.
- The connecting cables should have at least a 2.5mm²-section per phase.

3.4 Starting the machine

Press the green button to start the machine. To start again the machine press on the red button.

3.5 Water cooling system

- Fill the water pan with clean water to the small hole drilled into the plastic water tray.
- Ensure that water is delivered adequately to both sides of the blade, as insufficient water supply may result in premature failure of the diamond blade.
- Always make sure that there is enough water in the pan and refill if necessary.
- In case of frost, empty the water cooling system from its water.

4. Transport and storing

4.1 Securing for transport

Before transporting the machine, always remove the blade and empty the water pan.

4.2 Long period of inactivity

If the machine is not going to be used for a long period, please take the following measures:

- Completely clean the machine
- Empty the water system

The storage site must be clean, dry and at a constant temperature.

5. Operating the machine

5.1 Site of work

5.1.1 Siting the machine

- Remove from the site anything, which might hinder the working procedure!
- Make sure the site is sufficiently well lit!
- Observe manufacturer's conditions for connecting to power supplies!
- Place electric cables in such a way that damage by the device is excluded!
- Make sure you have a continual adequate view of the working area so you can intervene in the working process at any time!
- Keep other staff out of the area, so you can work securely.

5.1.2 Space required for operation and maintenance

Leave 2 m in front of the machine and 1,5 m around it for usage and maintenance of the TT251.

5.2 Cutting methods

To use the machine correctly, you must face it with the two hands on the tile to be cut, pushing the tile against the blade. Always keep your hands away from the moving blade.

5.3 Bevel cut



- Loosen the two screws (1) on each side of the machine.
- Pivot the table until you reach the desired angle.
- Fix the table with the screws (1). Adjust the distance to blade in regard to the tile to be cut.

5.4 General advice for the cutting

- Tiles can be cut with the machine. Before commencing work make sure tools are firmly seated!
- Select the right tools as recommended by the manufacturer depending on the material to be worked, the working procedure (dry or wet cut) to be carried out and the required efficiency.
- Make sure the water pan contains enough water.
- Set the guide-a-cut to the desired width of cut, using the two engraved measurements to align it correctly.
- Do not force on the motor. This machine is designed for a continuous use.

6. Maintenance and servicing

To ensure a long-term quality from the cutting with the TT251, please follow the maintenance plan below:

		Begin of the day	During the changing of tool	End of the day or more often if required	Every week	After a fault	After a damage
Whole machine	Visual control (general aspect, watertightness)						
	Clean						
Flange and blade fixing devices	Clean						
Motor cooling fans	Clean						
Water pan	Clean						
Engine housing	Clean						
Reachable nuts and screws	Tighten up						

Maintenance of the machine

Always perform the maintenance of the machine with the machine isolated from the electrical supply.

Lubrication

The TT251 uses life-lubricated bearings. Therefore, you don't need to lubricate the machine at all.

Cleaning of the machine

Your machine will last longer if you clean it thoroughly after each day of work, especially water pan, motor and blade flange.

7. Faults: causes and cures


7.1 *Fault-finding procedures*

Should any fault occur during the use of the machine, turn it off, and isolate it from the electrical supply. Any works dealing with the electrical system or supply of the machine can only be carried out by a qualified electrician.

7.2 *Trouble-shooting guide*

Trouble	Possible source	Resolution
Motor is not running	No electricity	Check the electrical supply (fuse for example)
	Connection cable section too small	Change connection cable
	Defective connection cable	Change connection cable
	Defective switch	CAUTION : can only be solved by qualified electrician
	Defective motor	Change motor or contact motor manufacturer
No water on the blade	Not enough water in the pan	Refill the water pan

7.3 Circuit diagram

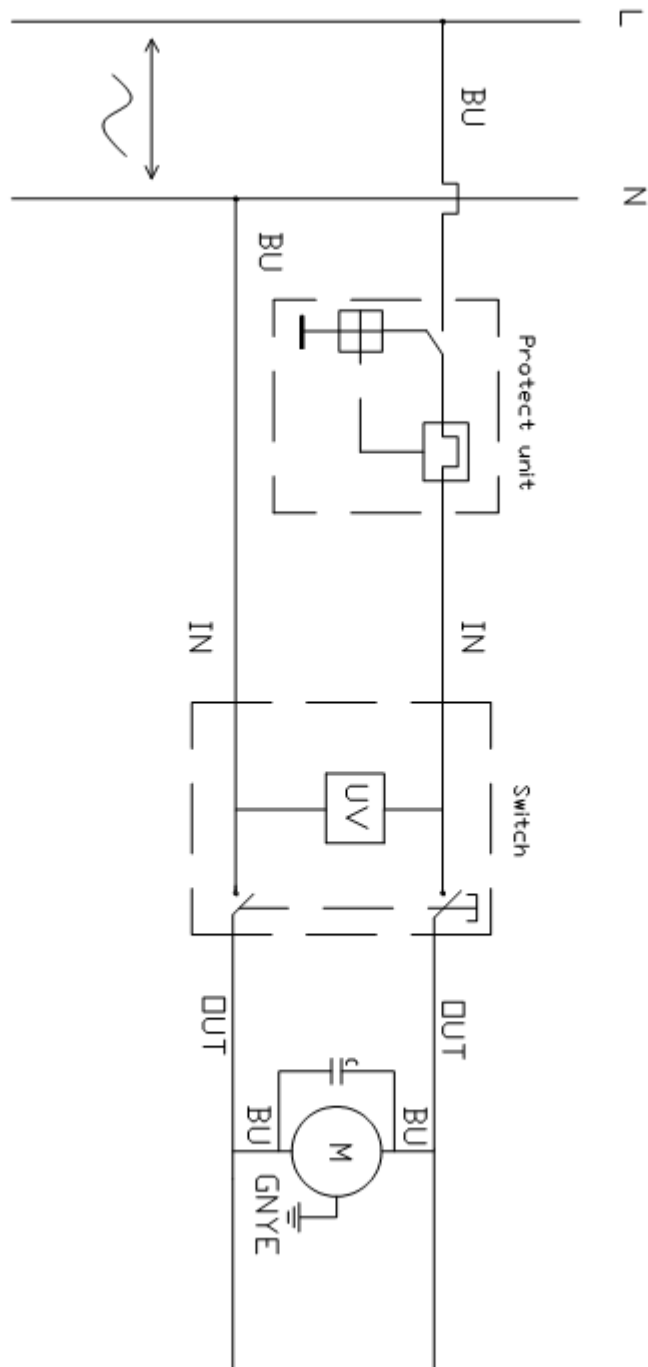

7.4 Customer service

When ordering spare parts, please mention:

- The serial number
- The code of the part.
- The exact denomination.
- The number of parts required.
- The delivery address.
- Please indicate clearly the means of transportation required such as "express" or "by air". Without specific instructions, we will forward the parts through the means which seem appropriate to us --- but which is not always the quickest way.

Clear instructions will avoid problems and faulty deliveries.

If not sure, please send us the defective part.

In the case of a warranty claim, the part must always be returned for evaluation.

Spare parts for the motor can be ordered with the manufacturer of the motor or with their dealer, which is often quicker and cheaper.

This machine has been manufactured by Saint-Gobain Abrasives S.A.

190, Bd J.F.Kennedy

L- 4930 BASCHARAGE

Grand-duché de Luxembourg.

Tel. : 00352-50401-1

Fax : 00352- 50 16 33

<http://www.construction.norton.eu>

e-mail: sales.nlx@saint-gobain.com

Guarantee can be claimed and technical support obtained from your local distributor where machines, spare parts and consumables can be ordered as well

SAINT-GOBAIN ABRASIVES NV/SA
INDUSTRIELAAN 129
1070 ANDERLECHT: BRUSSEL
BELGIUM
TEL: +32 2 267 2100
FAX: +32 2 267 8424

SAINT-GOBAIN ABRASIVES, S.R.O.
VINOHRADSKÁ 184
130 52 PRAHA 3
CZECH REPUBLIC
TEL: +420 267 132 026
+420 267 132 029
FAX: +420 267 132 021-2

SAINT-GOBAIN ABRASIVES A/S
ROBERT JACOBSENS VEJ 62A
2300 KØBENHAVN S
DENMARK
TEL: +45 4675 5244

PO BOX 643706
FORTUNE TOWER OFFICE 2106
JLT BLOCK C
(NEXT TO METRO STATION)
JUMEIRA LAKE TOWER, DUBAI
UNITED ARAB EMIRATES
TEL: +971 4 431 5154
FAX: +971 4 431 5434

SAINT-GOBAIN ABRASIFS
RUE DE L'AMBASSADEUR - B.P.8
78 702 CONFLANS CEDEX
FRANCE
TEL: +33 (0)1 34 90 40 00
FAX: +33 (0)1 39 19 89 56

SAINT-GOBAIN ABRASIVES GMBH
BIRKENSTRASSE 45-49
D-50389 WESSELING
GERMANY
TEL: +49 (0) 2236 703-1
+49 (0) 2236 8996-0
+49 (0) 2236 8911-0
FAX: +49 (0) 2236 703-367
+49 (0) 2236 8996-10
+49 (0) 2236 8911-30

FÜR DEN FACHHANDEL ÖSTERREICH
TEL: +43 (00) 662 430 076

SAINT-GOBAIN ABRASIVES KFT.
1225 BUDAPEST
BÁNYALÉG U. 60/B.
HUNGARY
TEL: +36 1 371 22 50
FAX: +36 1 371 22 55

SAINT-GOBAIN ABRASIVI S.P.A
VIA PER CESANO BOSCONI 4
I-20094 CORSICO MILANO
ITALY
TEL: +39 02 44 851
FAX: +39 02 44 78 266

SAINT-GOBAIN ABRASIVES S.A.
190 RUE J.F. KENNEDY
L-4930 BASCHARAGE
GRAND DUCHE DE LUXEMBOURG
TEL: +352 50 401 1
FAX: +352 50 16 33
NO. VERT (FRANCE) 0800 906 903

SAINT-GOBAIN ABRASIFS, S.A.
2 ALLÉE DES FIGUIERS
AIN SEBÂÂ - CASABLANCA
MOROCCO
TEL: +212 5 22 66 57 31
FAX: +212 5 22 35 09 65

SAINT-GOBAIN ABRASIVES BV
GROENLOSEWEG 28
7151 HW EIBERGEN
P.O. BOX 10
7150 AA EIBERGEN
THE NETHERLANDS
TEL: +31 545 466 466
FAX: +31 545 474 605

SAINT-GOBAIN ABRASIVES AS
POSTBOKS 11, ALNABRU,
0614 OSLO
BROBEKKVEIEN 84,
0582 OSLO
NORWAY
TEL: +47 63 87 06 00
FAX: +47 63 87 06 01

SAINT-GOBAIN HPM POLSKA SP. Z O.O.
UL. TORUŃSKA 239/241
62-600 KOŁO
POLAND
TEL: +48 63 26 17 100
FAX: +48 63 27 20 401

SAINT-GOBAIN ABRASIVOS, L. DA
ZONA INDUSTRIAL DAMAIA
I-SECTOR VIII, NO. 122
APARTADO 6050
4476 - 908 MAIA
PORTUGAL
TEL: +351 229 437 940
FAX: +351 229 437 949

SAINT-GOBAIN GLASS
BUSINESS UNIT ABRASIVI
PUNCT DE LUCRU: ÎOC.VETIS, JUD.
SATU MARE 447355
STR. CAREIULUI 11
PARC INDUSTRIAL RENOVATIO
ROMANIA
TEL: +40 261 839 709
FAX: +40 261 839 710

SG HPM RUS
58, F. ENGELS STR.
STROENIE 2
105082 MOSCOW
RUSSIA
TEL: +74 955 408 355
FAX: +74 959 373 224

SAINT-GOBAIN
ABRASIVES (PTY) LTD
2 MONTEER ROAD
ISANDO 1600
P.O. BOX 67
SOUTH AFRICA
TEL: +27 11 961 2000
FAX: +27 11 961 2184/5

SAINT-GOBAIN ABRASIVOS, S.A.
CTRA. DE GUIPÚZCOA, KM. 7,5
E-31195 BERRIOPLANO (NAVARRA)
SPAIN
TEL: +34 948 306 000
FAX: +34 948 306 042

SAINT GOBAIN ABRASIVES AB
GÅRDSFOGDEVÄGEN 18A
168 66 BROMMA • SVERIGE
SWEDEN
TEL: +46 8 580 881 00
FAX: +46 8 580 881 01

SAINT-GOBAIN ABRASIVES
MUEYYETZADE MAH.
GALIPDEDE CAD. NO:99, KAT:3
34425 BEYOGLU-ISTANBUL-TURKEY
TEL: 0090-212-245 85 21
FAX: 0090-212-245 85 27

SAINT-GOBAIN ABRASIVES LTD.
DOXEY RD
STAFFORD
ST16 1EA
UNITED KINGDOM
TEL: +44 1785 222 000
FAX: +44 1785 213 487

